

Smart Scale II ™

SSRB2



QUICK START GUIDE

## **Start Here**

## 

#### • What's in the box?



## Layout


side of scale



#### · Charging the Battery



- Open the USB port cover.
- Insert a USB-C cable (included) into the port.
- Insert the large end of the USB cable into a computer, charging port or other device for charging your scale's battery.
- The scale will automatically turn on to verify that the charging cord is correctly connnected. We recommend turning off the scale manually at this time to reduce charging time.
- When charging is finished remove USB cable from scale and replace the port cover. **Do not overcharge battery.**

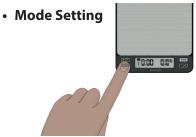

- Press "ON/OFF" button.
- Press MODE button.
- The display will read, "\","⊇","∃", "Ч", "5", or "Б".
- Press the MODE button again to toggle through these six modes.
- Switch the unit of measurement from grams to ounces by holding the [MODE] button down for about four seconds.
  Repeat this step to toggle back to measuring in grams.

# • Mode 1 fully manual



- Mode indicator displays " $\mbox{\ensuremath{"}}$  on the left of the LCD.
- No automatic functions.
- User TARES and starts timer by pressing appropriate buttons.
- Timer is paused by pressing the TIME button. It will reset to  $\square:\square\square$  by pressing the TIME button once more.

### Mode 2

for making espresso (Auto-tare and Auto-timer with immediate timer start)





- Mode indicator displays a "2" on the left of the LCD.
- Place cup on platform.
- Display will flash once.
- Weight will automatically TARE.
- Timer begins to count up.
- Weight is displayed as added.
- After cup is removed, the last time and weight are displayed for 5 seconds. Time then returns to 0'00" and weight returns to 0.0g.

**2**0:00 0.0°

• **Note:** Always lift items off of the platform. Sliding items may result in flawed readings.

#### Mode 3

for making espresso (Auto-tare and manual timer start)





- Mode indicator displays "3" on the left of the LCD.
- · Place cup on platform.
- Weight will automatically TARE.
- Press start button on espresso machine and TIME button on scale simultaneously.
- · Timer begins to count up.
- · Weight is displayed as added.
- After cup is removed, last time and weight are displayed for 5 seconds. Time then returns to 0'00" and weight returns

#### Mode 5

for making espresso (Auto-tare and Auto-timer with timer starting when liquid hits the cup)









- Mode indicator displays "5" on the left of the LCD.
- · Place cup on platform.
- Weight will automatically TARE.
- When liquid hits the cup, the timer automatically starts to count up.
- · Weight is displayed as added.
- After cup is removed, last time and weight are displayed for 5 seconds. Time then returns to  $0^{\prime}00^{\prime\prime}$  and weight returns to 0.0q.

 
#### Mode 4

for making espresso (Auto-tare only; timer is not active)





- Mode indicator displays "4" on the left of the LCD.
- · Place cup on platform.
- · Weight will automatically TARE.
- Weight is displayed as added
- · After cup is removed, last weight is displayed for 5 seconds. Weight then returns to 0.0g.



- · Turn off the scale.
- Press and hold ON/OFF button
- While holding the ON/OFF button, press the TARE button 4-5 times quickly until "180" is displayed.
- · Release both buttons.
- Press the MODE button to switch between "0/60/120/180" seconds. (If "0" is selected, the Auto-off function will be disabled.)
- After choosing desired time, press the ON/OFF button again.
- The display will show "PASS" to confirm this setting.
- · The scale will turn off automatically.
- Please note: To keep a longer battery life, please turn off the scale by pressing ON/OFF button after each use.



#### Silicone Pad

Use of the silicone pad is optional. It is included to provide additional water resistance. It also prevents slight weight variations caused by abrupt temperature changes on the platform.



- · Place the silicone pad onto the platform with the Brewista logo oriented to be read left to right.
- · Ensure that the pad covers the platform completely without interfering with platform travel.
- The silicone pad is dishwasher safe (top rack).

## Washing Instructions

- · Wipe scale clean with soft, damp cloth.
- · Do not submerse the scale in water. Doing so may require excessive drying time and damage the scale.
- · Do not press hard on the platform.
- Dry the exterior of the scale with a soft cloth or leave to dry on a dish rack with the LCD and buttons pointing up.





REPELS